 


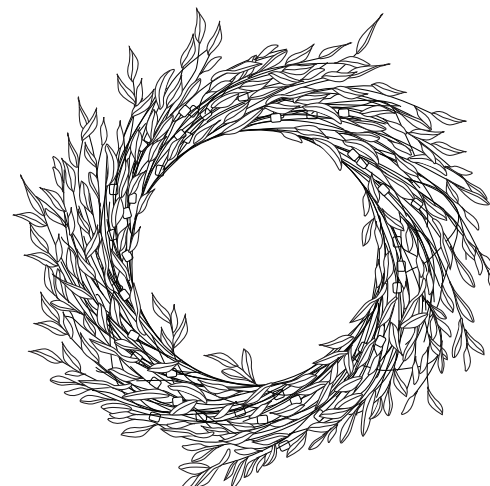

IMPORTANT

Before using your Lamplust Frosted Mistletoe Wreath, make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. This approach must be used by the person(s) caring for and operating the wreath.



GENERAL INFORMATION

The wreath is suited for indoor use only. DO NOT attempt to replace or repair any damaged cable parts. After use, ensure the wreath is clean and dry before storage.

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE IN FIRE. Please dispose at your local recycling facility.

WHAT WE PROVIDE

- Frosted Mistletoe Wreath with 75 LED Fairy Lights
- 4 x AA Battery Box
- Decorative Fabric Bag to Conceal Battery Box

STEP BY STEP INSTRUCTIONS

 
Before using your wreath, remove packaging. When setting up your wreath, carefully position cables to avoid a tripping hazard.



1

STYLE AND HANG YOUR WREATH


The branches on the wreath come tightly packed for shipping. Separate and style the branches for your desired look. Be sure that the wreath is hung on a nail, screw, or hook that is strong enough to support the weight of the wreath.

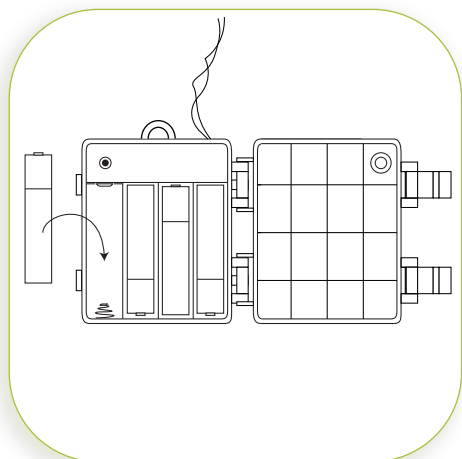

2

BATTERY INSTALLATION

 The wreath works with 4 x AA batteries. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.

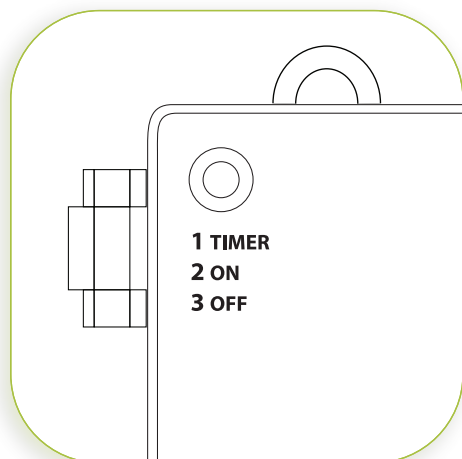

3

BUTTON OPTIONS

Press the button once to activate the 6-hour timer. Once set, the wreath will turn on and off at the same time each day. Press the button again to turn on the wreath with no timer. Press the button a third time to turn off the wreath.



4

CONCEALING THE BATTERY BOX

Place the battery box inside the included decorative fabric bag and tie the drawstring. Hook the battery box onto the hook at the back of the wreath and arrange branches to conceal.