

INSTALLATION INSTRUCTIONS



IMPORTANT

Before opening your LampLust Slim Flat Top Pillar Candles, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.

 
 
GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS

Before turning on your candles, **locate the batteries on the inside of the styrofoam packaging**. Then, remove the plastic from around the batteries and insert them into the the battery compartment.

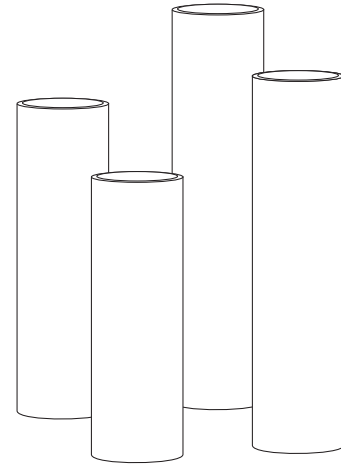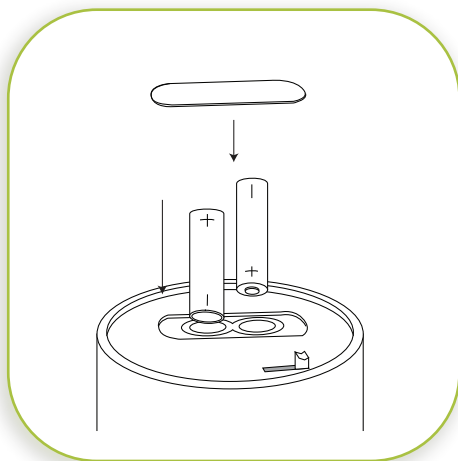

MODEL NO.

LC004778


LC004780

WHAT WE PROVIDE

- Four Slim Flat Top Pillar Candles
- 8 AA Batteries (2 Per Candle)
- 6 Button Remote Control

BATTERY INSTALLATION

 
The candles work with 2 x AA batteries (included). Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

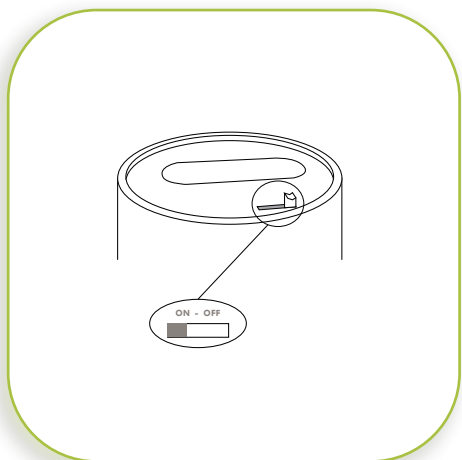

2

SWITCH OPTIONS

 The ON/OFF switch is located on the bottom of the candle, below the battery compartment. Once the switch is turned to the "ON" position, the candle can be controlled using the remote. To maximize battery life manually turn off the candles at the switch during long periods of non-use.

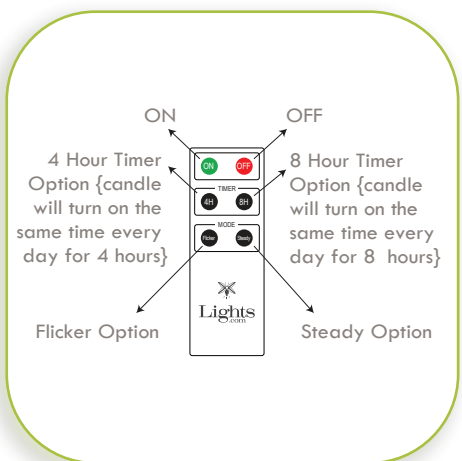

3

REMOTE FUNCTIONS

The candle switch must be turned to "ON" in order for the remote control to function.