



IMPORTANT

Before operating your LampLust Eden Lantern, please make sure that you carefully read through these instruction sheets.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the lantern.

GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from the lantern during long periods of non-use. **DO NOT DISPOSE OF IN FIRE.** Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS

Before turning on your lantern, locate the batteries on the inside of the packaging. Then remove the plastic from around the batteries and insert them into the battery compartment.

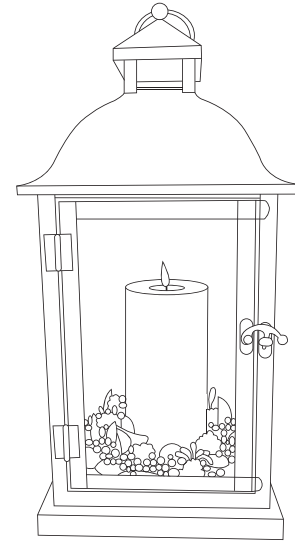


WHAT WE PROVIDE

- Eden Outdoor Lantern with Infinity Wick Candle
- 2 x C Batteries
- Berry Candle Ring (Removeable)

BATTERY INSTALLATION

The lantern works with 2 x C batteries. The battery compartment is located on the bottom of the lantern. To install new batteries, unscrew the panel on the bottom. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

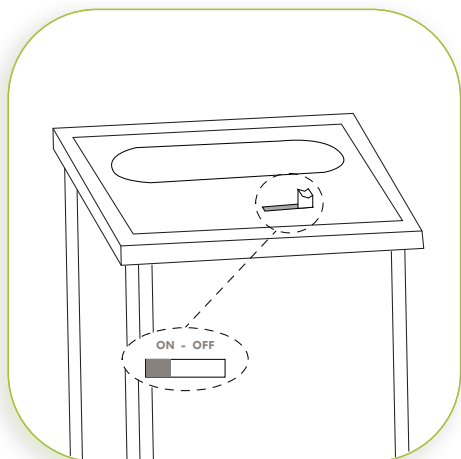**2****ON/OFF/TIMER**

The On/Off/Timer switch is located on the bottom of the candle, next to the battery compartment. Utilize this switch to operate the candle. The timer function will set the candle to turn on at the same time every day for 6 hours.