



### IMPORTANT

Before using your Lamplust Frosted Mistletoe Garland, make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. This approach must be used by the person(s) caring for and operating the garland.

### GENERAL INFORMATION

 
The garland is suited for indoor use only. DO NOT attempt to replace or repair any damaged cable parts. After use, ensure the garland is clean and dry before storage.

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE IN FIRE. Please dispose at your local recycling facility.

### STEP BY STEP INSTRUCTIONS

Before using your garland, remove packaging. When setting up your garland, carefully position cables to avoid a tripping hazard.

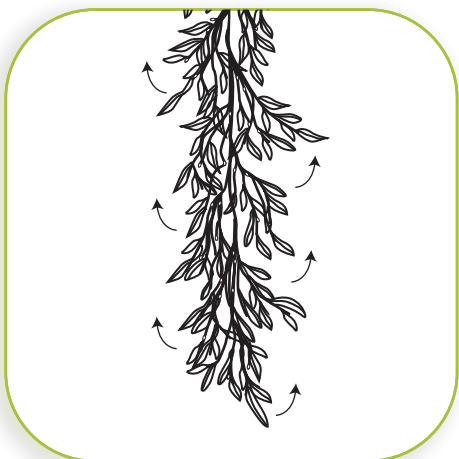


### WHAT WE PROVIDE

- Frosted Mistletoe Garland with 100 LED Fairy Lights
- 3 x AA Battery Box
- Decorative Fabric Bag to Conceal Battery Box

# 1

### STYLE YOUR GARLAND

 
The branches on the garland come tightly packed for shipping. Separate and style the branches for your desired look.

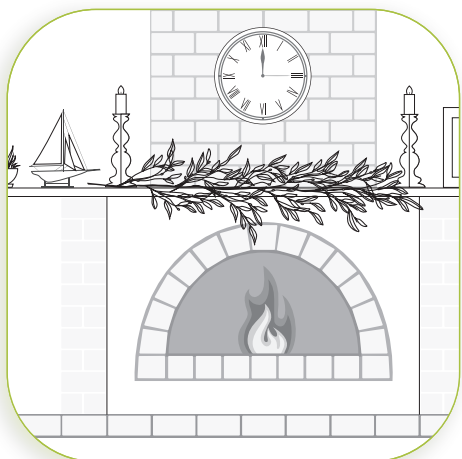

2

**SELECT A LOCATION FOR YOUR GARLAND**

 
Be sure that the garland is hung or placed securely to support the weight of the garland.

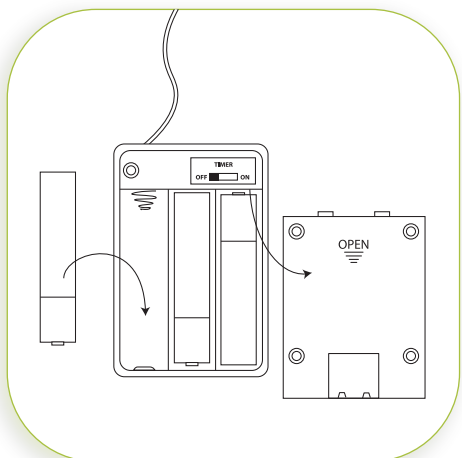

3

**BATTERY INSTALLATION**

 The garland works with 3 x AA batteries (not included). Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartment secured before use.

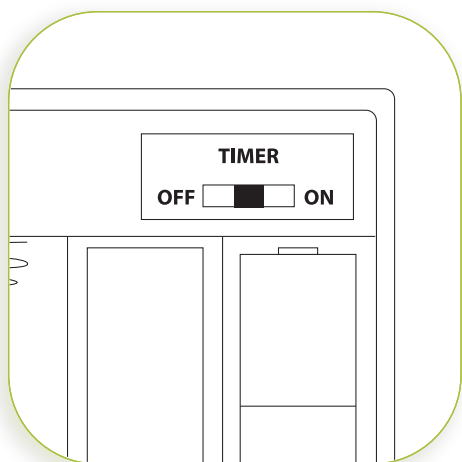

4

**BUTTON OPTIONS**

Move the battery box switch to the center to utilize the 6-hour timer function. Once set, the garland will turn on and off at the same time each day. Move the switch all the way to the right to turn on the garland with no timer.



# 5

## CONCEALING THE BATTERY BOX

Place the battery box inside the included decorative fabric bag and tie the drawstring.