



IMPORTANT

Before using your LampLust Solar Powered Candles, please make sure that you carefully read through these instruction sheets.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.

GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use. **DO NOT DISPOSE OF IN FIRE.** Please dispose at your local recycling facility.


STEP BY STEP INSTRUCTIONS

Before operating your solar candle, remove packaging and ensure that the switch on the bottom of the candle has been switched to "ON". The candle must be turned on in order for the battery to charge.

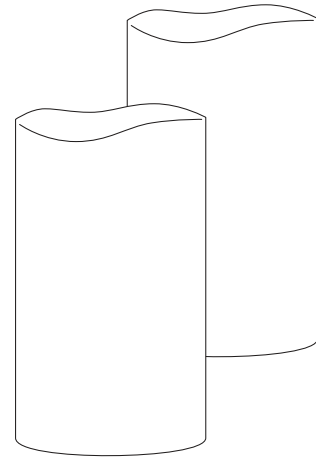

WHAT WE PROVIDE


- 2 x 4" x 8" Solar Powered Pillar Candles
- 2 x AA 1.2V / 300MAH NI-MH Rechargeable Batteries (1 Per Candle)

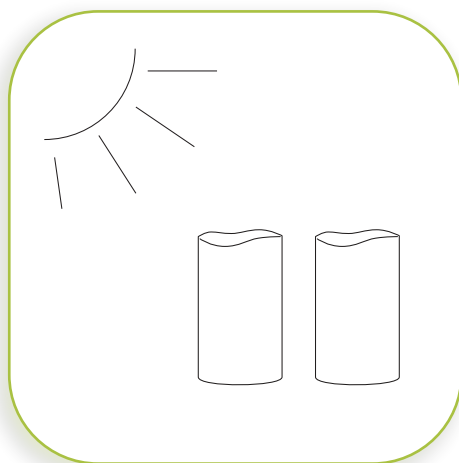

SOLAR CHARGING

Maximum sunlight will give the internal battery the best charge and give you the best results. Position the solar candles out in the open, where they are free from any cover or shade. Avoid proximity to other light sources, which may cause the solar candle to flicker. The solar candles will not be very bright or long lasting, until the batteries are fully charged. Once charged, the solar candles will automatically turn on at dusk each day and remain illuminated for up to 6-8 hours, depending on the solar charge received that day.

NOTE: You may charge the batteries in a battery charger, or charge with the solar panel. When using the solar panel be sure that the batteries receive a full day's worth of sunlight before use.

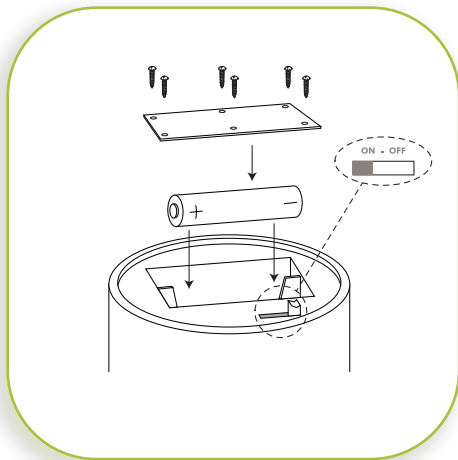

2

BATTERY REPLACEMENT

Batteries may need replacing after 1-2 years, depending on the operating conditions. When installing new batteries be sure to insert the battery with the correct polarity as indicated (+/-) and secure the battery compartment before use.

TROUBLESHOOTING

Solar candles not operating properly at night may be caused by one of the following conditions:

- The switch might be in the off position. Ensure that the switch is in the on position.
- Low light levels during the day, caused by the position in which the candle is placed or lack of sunlight, will shorten the solar candle's operating time at night.
- If the candle surface is dirty, the charging ability will be reduced. Clean the surface occasionally with a damp cloth.
- The batteries might need to be replaced. In the event they do need replacing, see "BATTERY REPLACEMENT" above.
- Please note that the solar candles will not function in the daytime or in a brightly lit environment.