



### IMPORTANT

Before using your Hugo Outdoor LED Lamp please make sure that you carefully read through these instruction sheets.


This lantern is powered by an integrated lithium ion battery. It should be charged with the included power cord and adapter. The charge will last anywhere from 10-120 hours. This is dependent on the dimmer function. The brighter the light, the shorter the charge. If you choose a dimmer light, the battery charge will last longer.

The lantern itself is waterproof with an IP rating of IP54, but the charging cable and power adapter are not waterproof and should not be left outside.

It is NOT advisable to replace the batteries.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the lantern.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

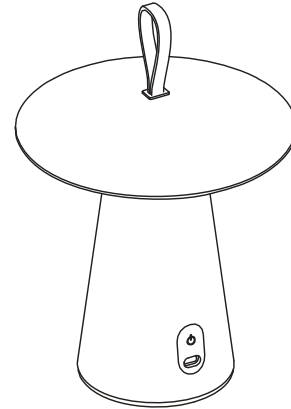


### WHAT WE PROVIDE

- 1 x Hugo Outdoor Portable LED Lamp
- Charging Cable
- Power Adapter

### STEP BY STEP INSTRUCTIONS


Carefully set aside all parts and pieces.

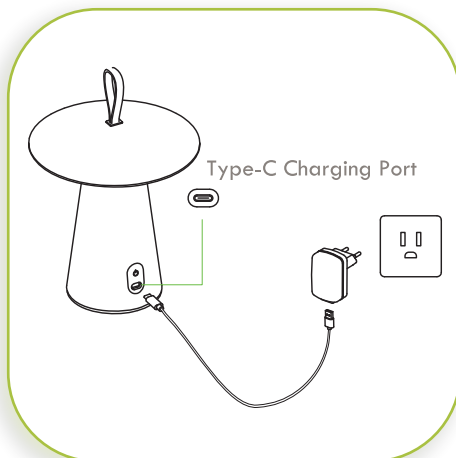

### CHARGING WITH THE POWER CORD

Connect the USB cable to the Type-C port. The charging time is about 5 hours. When the LED light on the indicator becomes steady green, disconnect the cable from the port.


- The green indicator will flash if the lamp is on charge.
- The green indicator will be steady when the lamp is fully charged.
- The average charging time is 5 hours.

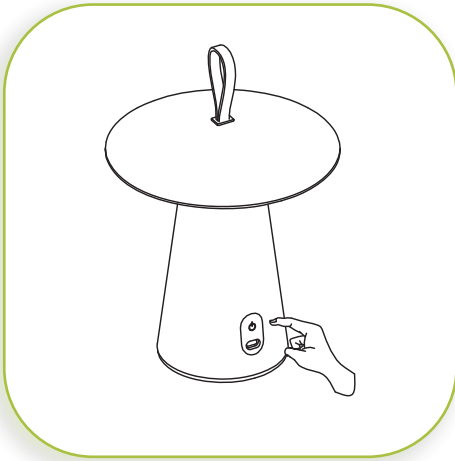

2

**ON/OFF SWITCH**

- Lightly press the touch switch to turn on the lamp.
- Press again to turn off.

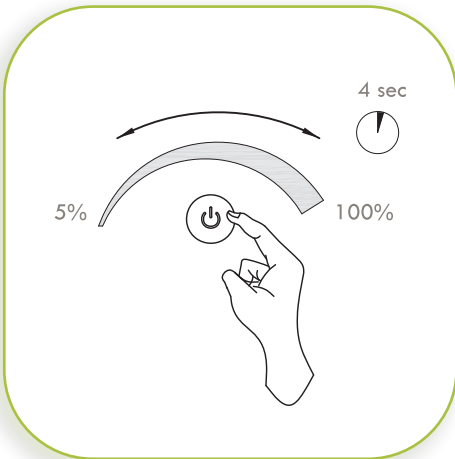


3

**DIMMER FUNCTION**

When the lamp is switched on, long press the switch until obtain the desired brightness and then release the switch.

Memory function: The light intensity will correspond to the previously set intensity after restart except the lamp runs out of battery.

- Lightly press the touch switch to turn on the lamp.
- Hold the switch to lighten the luminaire of full intensity

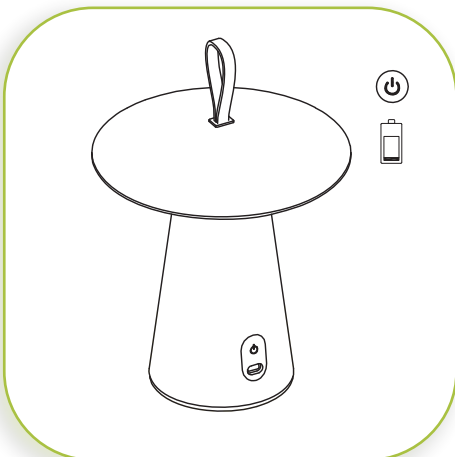

4

**LOW BATTERY ALERT**

Fully charge the battery before initial use. It is best to charge the battery when the battery level falls below 20%.

- Less than or equal to 20% - The orange light will flash 5 times.
- Less than or equal to 10% - The orange light will flash 5 times.
- Less than or equal to 5% - The orange light will flash 5 times every 10 minutes