

## INSTRUCTIONS




# Lights.com

### IMPORTANT

Before operating your LampLust LED Pumpkins, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the LED pumpkins.

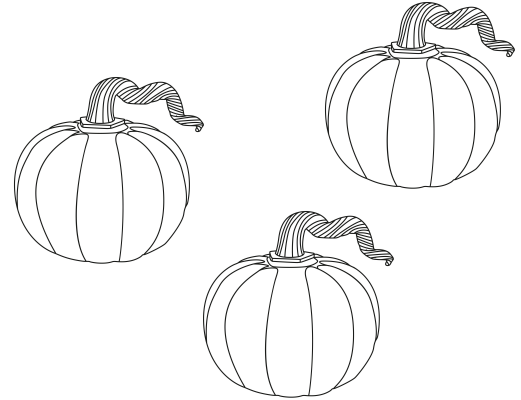

### GENERAL INFORMATION


Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove batteries from the product during long periods of non-use.

For safety purposes, this item has a screw to keep the battery compartment closed. Please make sure to keep the item sealed with the provided screw AT ALL TIMES.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

### STEP BY STEP INSTRUCTIONS

Before turning on your LED pumpkins, locate the clear tab on the base of the pumpkin. Pull the clear tab to activate the pre-installed batteries.

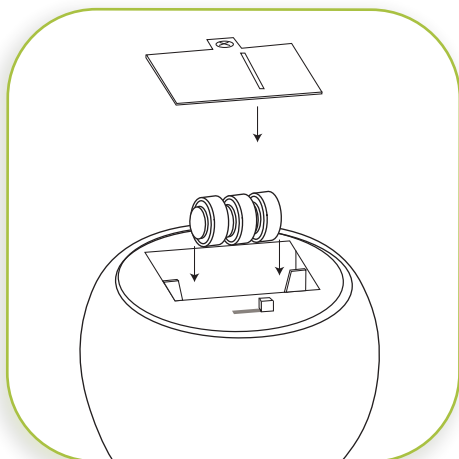

### WHAT WE PROVIDE

- 3 x Brynn Mini LED Pumpkins
- 9 x LR44 batteries (3 per pumpkin)

### MODEL

- LC005128
- LC005130

### BATTERY INSTALLATION

The pumpkins each work with 3 x LR44 batteries (included). Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured with the screw before use.

## INSTRUCTIONS

---



# 2

### SWITCH OPTIONS

The ON/OFF switch is located on the bottom of the pumpkin next to the battery compartment. The "ON" switch will automatically set the timer to turn on for 6 hours at the same time each day. To maximize battery life, manually turn off the pumpkin at the switch during long periods of non-use.