

 
# INSTALLATION INSTRUCTIONS



## IMPORTANT

Before opening your LampLust Distressed Taper Candles, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.

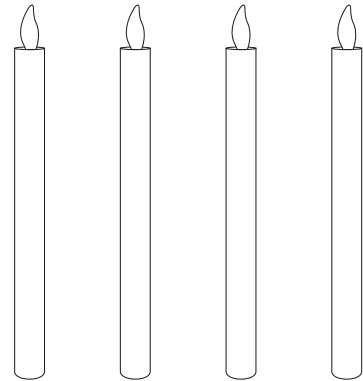

## GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

## MODEL NO.


LC003649  
LC003650  
LC003945  
LC003946

## WHAT WE PROVIDE

- Four Distressed Wax Taper Candles
- 8 AAA Batteries (2 Per Candle)
- 6 Button Remote Control

## STEP BY STEP INSTRUCTIONS

 Before turning on your candles, remove the plastic from around the batteries and insert them into the the battery compartment.

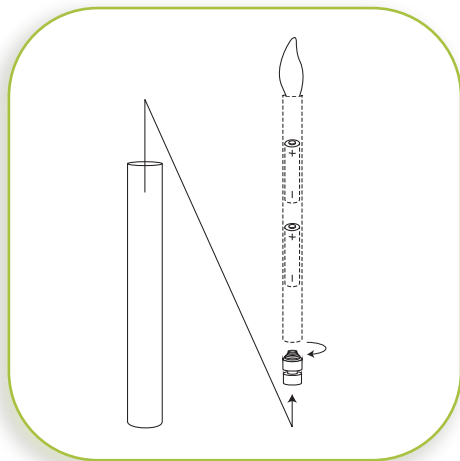


# 1

## BATTERY INSTALLATION

The candles work with 2 x AAA batteries (included). To locate the battery compartment remove the flame from the candle by pulling up. To open the battery compartment, unscrew the bottom from the base (counter clockwise). Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

 
# INSTALLATION INSTRUCTIONS

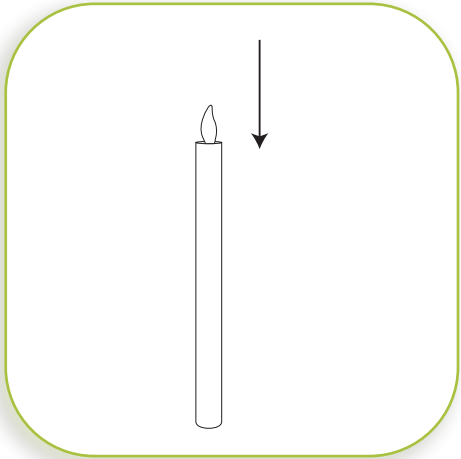

# 2

## ON/OFF

 Once the batteries are installed. Push the flame down to turn on and push the flame again to turn off.

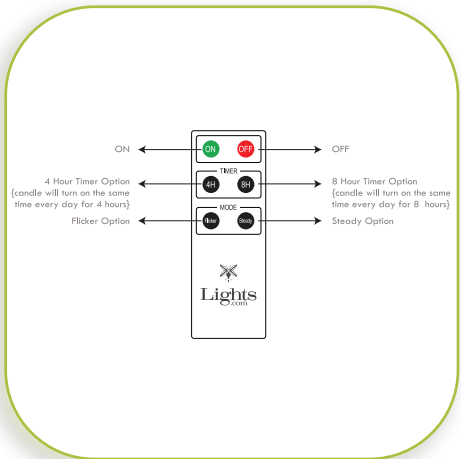

# 3

## REMOTE FUNCTIONS

The candle must be turned on in order for the remote control to function.