



IMPORTANT

Before opening your LampLust White Rustic Flameless Lanterns, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the lanterns.

 
 
GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS

Before turning on your lanterns, remove the battery tab from the battery compartment (located on the bottom of the lantern), thereby activating the batteries.

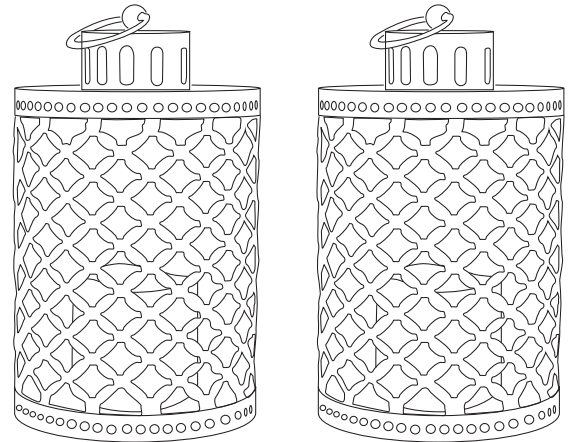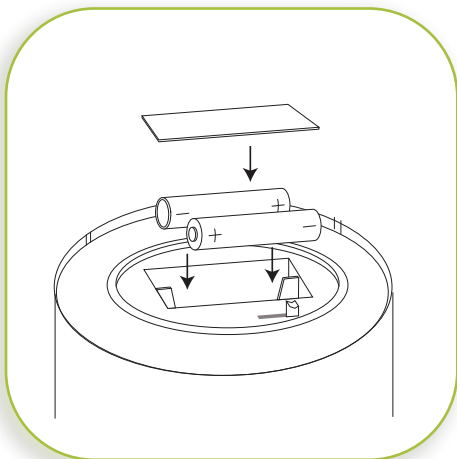


WHAT WE PROVIDE

- 2 White Rustic Lanterns with Ivory Flameless Candles
- 4 x AA Batteries (2 Per Lantern)
- Eight Button Remote Control

BATTERY INSTALLATION

These lanterns work with 2 x AA batteries (included). The battery compartment is located on the bottom of the lanterns. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

 
1

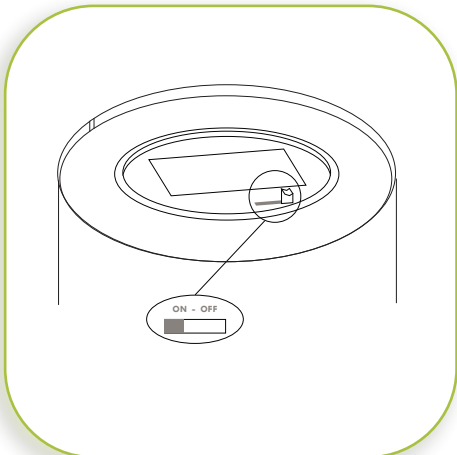

2

ON/OFF SWITCH

 The ON/OFF switch is located on the bottom of the lantern, below the battery compartment. To turn the lanterns on/off use the switch located on the bottom. Once the switch is turned to the "ON" position the candle can be controlled using the remote, until it is manually turned to "OFF."

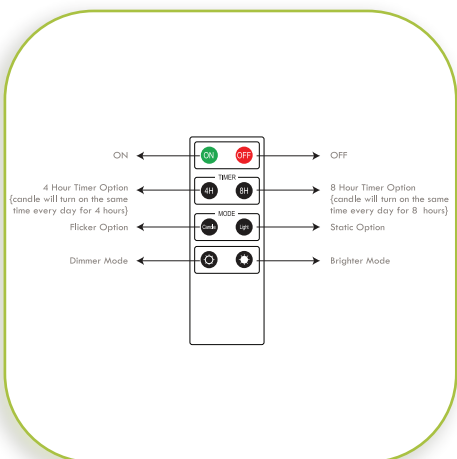

3

REMOTE FUNCTIONS

The lantern switch must be turned on in order for the remote control to function.