

 
INSTALLATION INSTRUCTIONS



IMPORTANT

Before opening your LampLust 15" Flameless Classic Taper Candles, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the tapers.

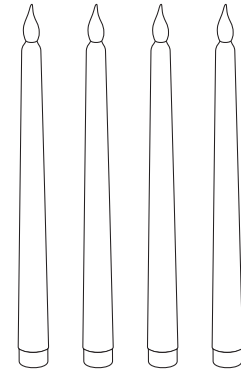

GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

MODEL NO.


LC003806
LC003807

WHAT WE PROVIDE

- Four 15" Flameless Taper Candles
- 8 AA Batteries (2 Per Candle)
- 6 Button Remote Control

STEP BY STEP INSTRUCTIONS

 
Before turning your tapers on, remove the battery tab from the battery compartment (located on the bottom of the candle), thereby activating the batteries.

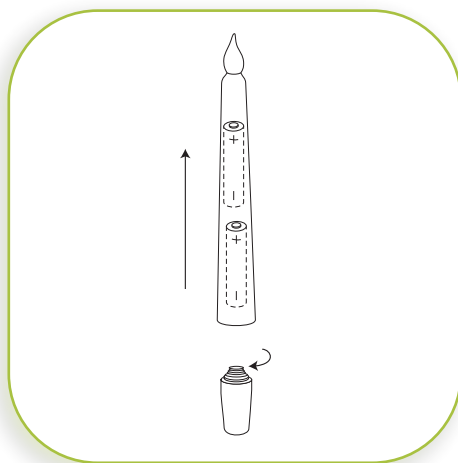

1

BATTERY INSTALLATION

 
Each taper works with 2 x AA batteries (included). The battery compartment is located on the bottom of the candles. To open the battery compartment, unscrew the candle from its base (counter clockwise). Battery should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

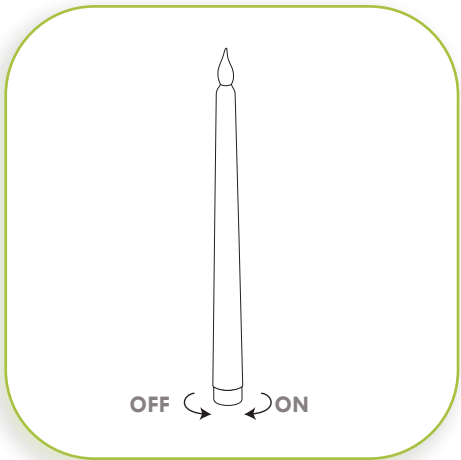

2

ON/OFF

 Turn the base of the candle clockwise until fully secured to turn on. Turn the base counterclockwise to turn off. To maximize battery life, manually turn taper off during long periods of non-use.

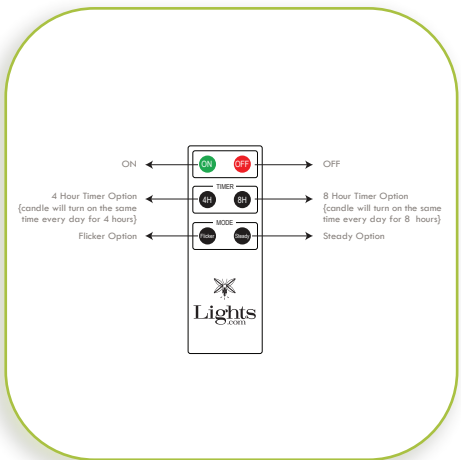

3

REMOTE FUNCTIONS

The candle switch must be turned on in order for the remote control to function.