


IMPORTANT

Before operating your LampLust Touchstone Double LED Flat Top Pillar Candle, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candle.

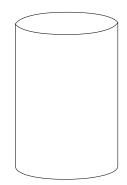

GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

MODEL NO.

LC003814 LC003815


LC003816

WHAT WE PROVIDE

- Double LED Flat Top Flameless Ivory Pillar Candle
- 2 C Batteries
- 6 Button Remote Control

STEP BY STEP INSTRUCTIONS

Before turning on your candles, remove the plastic from around the batteries and insert them into the the battery compartment.

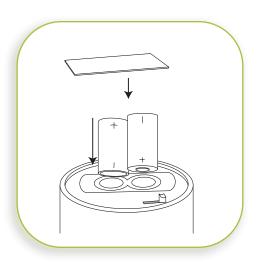

BATTERY INSTALLATION

The candle works with 2 x C batteries (included).

The battery compartment is located on the bottom of the candles. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.




2

ON/OFF SWITCH

The ON/OFF switch is located on the bottom of the candle, below the battery compartment.

Once the switch is turned to the "ON"position it can be controlled using the remote, until it is manually turned to "OFF".

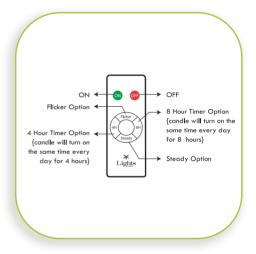

3

REMOTE FUNCTIONS

The candle switch must be turned to "ON" in order for the remote control to function. To maximize battery life, turn the candle off at the switch during long periods of non-use.