 


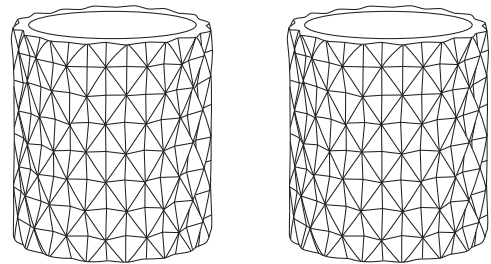

**IMPORTANT**

Before opening your LampLust Breo Matte White Flameless Candles, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candles.



**GENERAL INFORMATION**

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

 
DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

**WHAT WE PROVIDE**

- Two Matte White Ceramic Flameless Candles
- 4 AA Batteries (2 Per Candle)

**STEP BY STEP INSTRUCTIONS**


Before turning on your candles, remove the battery tab from the battery compartment (located on the bottom of the candle), thereby activating the batteries.

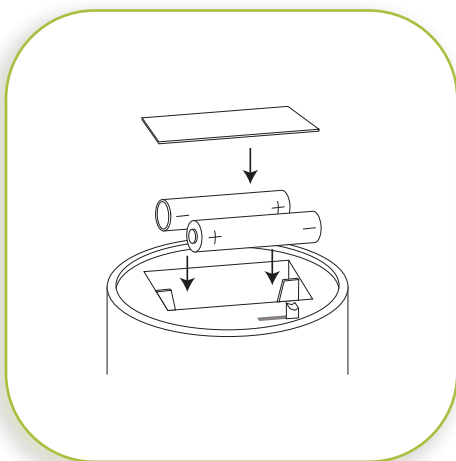

1

**BATTERY INSTALLATION**

 The candles work with 2 x AA batteries (included). The battery compartment is located on the bottom of the candles. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

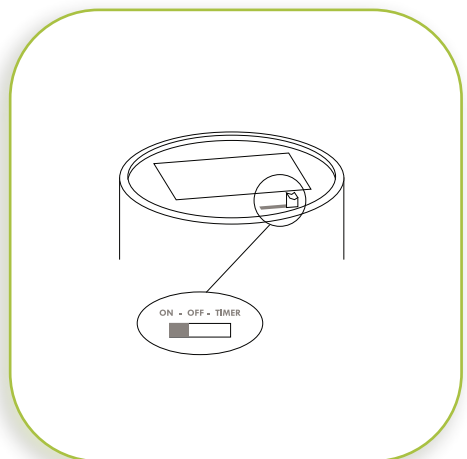

## 2

### ON/OFF/TIMER

The ON/OFF/TIMER switch is located on the bottom of the candle, below the battery compartment. The timer will automatically activate when the candle is set to "TIMER". The timer will remain on for 6 hours and will turn on and off at the same time each day once set.