

INSTALLATION INSTRUCTIONS



IMPORTANT

Before operating your Lamplust Gia Honeycomb Flameless Candle, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candle.

 
 
GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

STEP BY STEP INSTRUCTIONS

Before turning on your candle, remove the battery tab from the battery compartment (located on the bottom of the candle), thereby activating the batteries.

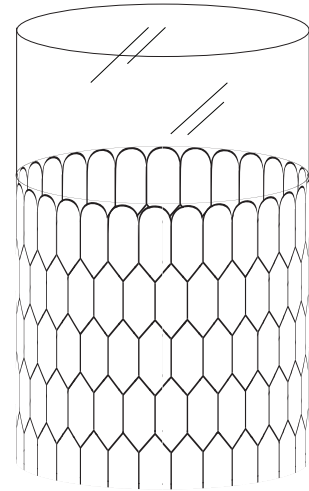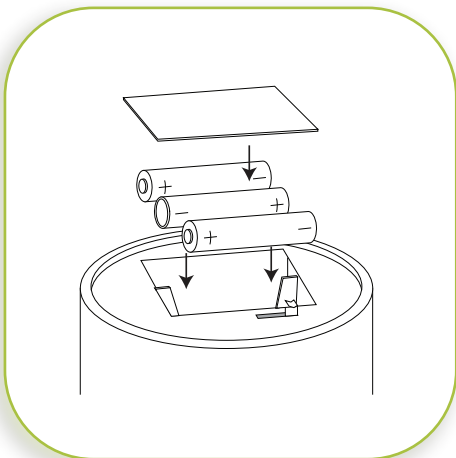

MODEL NO.

LC004016

LC004017

WHAT WE PROVIDE

 
- One Honeycomb Flameless Candle
- 3 x AA Batteries
- 8 Button Remote Control

BATTERY INSTALLATION

The candle works with 3 x AA batteries (included). The battery compartment is located on the bottom of the candle. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

1


INSTALLATION INSTRUCTIONS

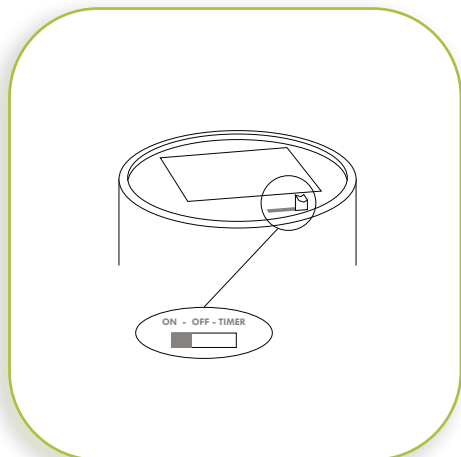

2

ON/OFF/TIMER SWITCH

 The ON/OFF/TIMER switch is located on the bottom of the candle, next to the battery compartment. The candles can be controlled using the remote when the switch is in the "ON" position. If you prefer to use the built-in timer, move the switch to "TIMER". The candle will turn on and remain on for 5-hours at the same time each day once set. Please note that the candles cannot be controlled with the remote when the switch is in the "TIMER" position.

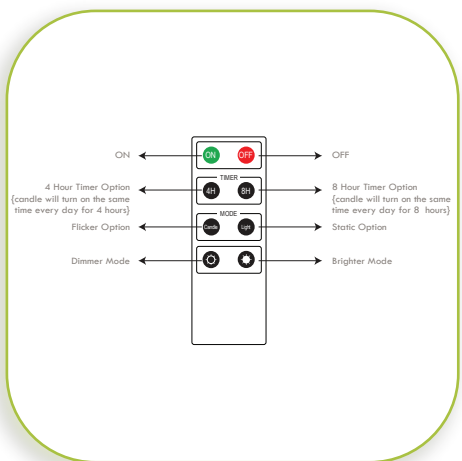

3

REMOTE FUNCTIONS

The candle switch must be turned to "ON" in order for the remote control to function. In order to set the timer with the remote, turn the candle off using the remote control and then press the desired timer button to set. The candle will turn on and off at the same time each day once set.