

 
INSTALLATION INSTRUCTIONS



IMPORTANT

Before operating your LampLust Signature Melted-Edge Wax Pillar Candle, please make sure that you carefully read through these instruction sheets.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the candle.

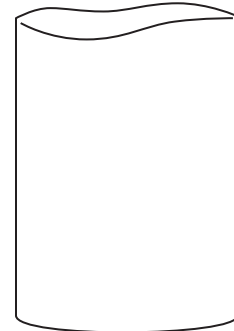

GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

Model No.

LC004067

LC004068


LC004069

WHAT WE PROVIDE

- One 4" Dia. Melted-Edge Wax Pillar Candle
- 2 x C Batteries

STEP BY STEP INSTRUCTIONS

 Before turning on your candles remove the battery tab from the battery compartment (located on the bottom of the candle), thereby activating the batteries.

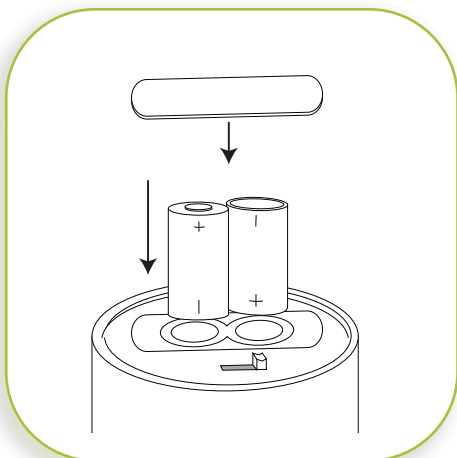


1

BATTERY INSTALLATION

The candle works with 2 x C batteries (included). Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

 
INSTALLATION INSTRUCTIONS

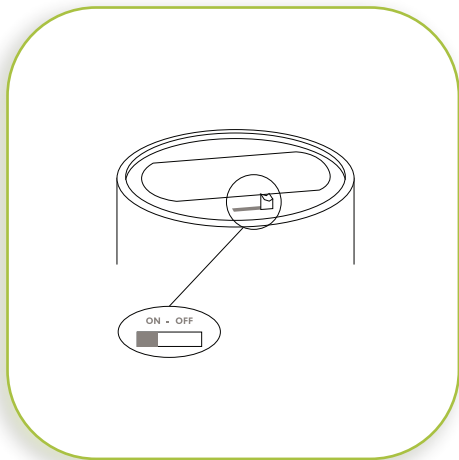

2

ON/OFF SWITCH

 The ON/OFF switch is located on the bottom of the candle, below the battery compartment.

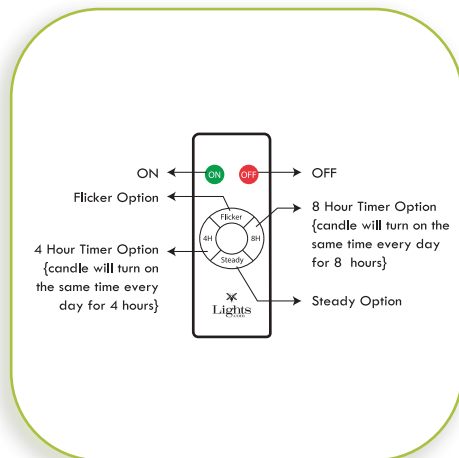

3

REMOTE FUNCTIONS (SOLD SEPARATELY)

The candle switch must be turned to "ON" in order for the remote control to function. Once the switch is turned to the "ON" position the candle can be controlled using the remote, until it is manually turned to "OFF". To maximize battery life, turn the candle off at the switch during long periods of non-use.