 


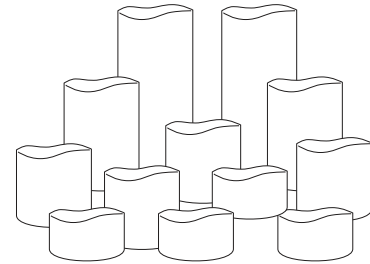

## IMPORTANT

Before opening your LampLust Flameless Resin Candles, please make sure that you carefully read through these instruction sheets.

**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. This approach must be used by the person(s) caring for and operating the pillars.



 
## GENERAL INFORMATION

Battery installation should only be performed by an adult. Only batteries of the same or equivalent type as recommended should be used. Battery leakage can cause corrosion and damage to this product so please remove non-functioning batteries immediately. Remove the batteries from product during long periods of non-use.

DO NOT DISPOSE OF IN FIRE. Please dispose at your local recycling facility.

## STEP BY STEP INSTRUCTIONS

Before turning on your pillars, remove the battery tab from the battery compartment (located on the bottom of the candle), thereby activating the batteries.

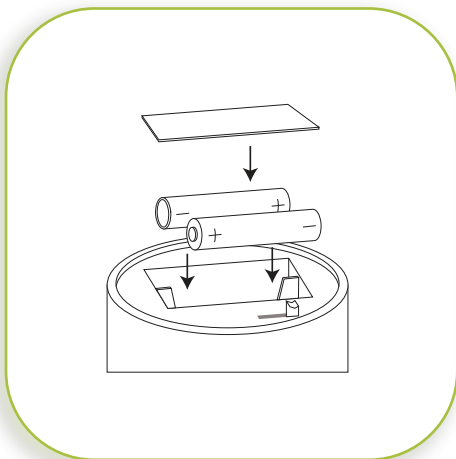


## WHAT WE PROVIDE

- Two 3" x 6" Color Changing Pillars
- Two 3" x 4" Color Changing Pillars
- 8 AA Batteries (Two Per Pillar)
- Four 2" x 3" Color Changing Votives
- Four 2" x 2" Color Changing Votives
- 8 CR2450 Batteries (One Per Votive)
- 8 Additional CR2450 Batteries

## BATTERY INSTALLATION (PILLARS)

 The candles work with 2 x AA batteries (included). The battery compartment is located on the bottom of the candles. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

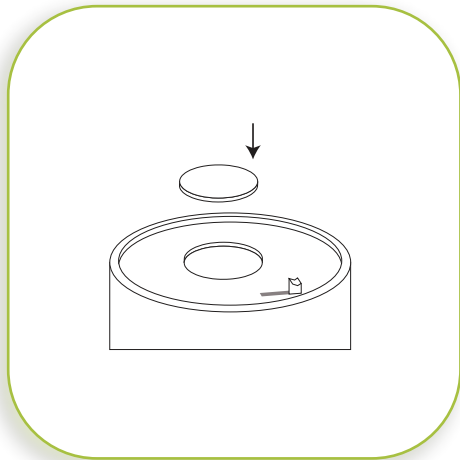


# 2

## BATTERY INSTALLATION (VOTIVES)

Each votive works with 1 CR2450 battery (included).

 The battery compartment is located on the bottom of the votive or tealight. Batteries should be inserted with the correct polarity as indicated (+/-) and battery compartments secured before use.

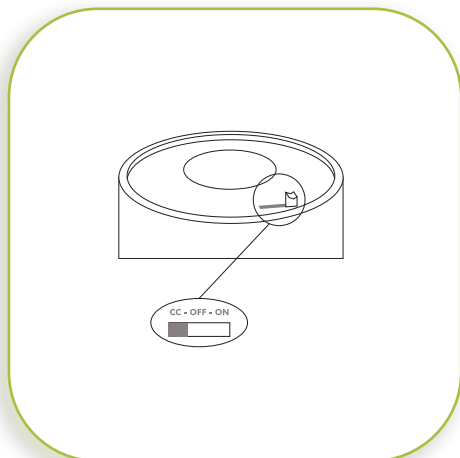

# 3

## ON/OFF SWITCH

The Color Changing/OFF/Warm White switch is located on the bottom of the candles, below the battery compartment.

To turn the candle Color Changing/OFF/Warm White use the switch located on the bottom. The color changing function will automatically activate when the candle is turned to "CC".